

## G. MAINTENANCE

---

1. Clean the surface of the instrument using a damp cloth.
2. Replace the 9 Volt battery when the low battery indicator appears on the LCD.

## H. TROUBLE SHOOTING

---

<b>Symptom</b>	<b>Probable Cause</b>
<b>Display reads "oFL"</b>	<ul style="list-style-type: none"><li>• Pressure over range</li><li>• Low battery.</li><li>• Damaged sensor.</li></ul>
<b>608 does not turn on.</b>	<ul style="list-style-type: none"><li>• Dead or low battery.</li><li>• Defective POWER ON switch.</li><li>• Broken battery connector.</li></ul>

## I. WARRANTY

---

This product is warranted to the purchaser against defects in material and workmanship for three years from the date of purchase.

**Covered by Warranty:** Repair parts and labor; or replacement of the product at company's option. Normal transportation charges to the purchaser are also covered.

**Not Covered by Warranty:** Damages to the product which are the result of abuse, improper use or maintenance are not covered. Any other expense, consequential damages, incidental damages, or incidental expenses including damages to property are not covered. Transportation expenses to the company are not covered.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

**To Obtain Warranty Performance:** Include with the product: your name, address, phone number, written description of the problem and proof of purchase date. Carefully package and return to:

**TPI, Inc.**  
9615 SW Allen Blvd.  
Beaverton, OR 97005  
USA

**TPI, Ltd.**  
342 Bronte Rd. S., Unit 9  
Milton, Ontario L9T 5B7  
Canada

**TPI, Europe Ltd.**  
Longley House, East Park  
Crawley  
West Sussex RH10 6AP  
England

**Implied Warranties:** Any implied warranties including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to three years from date of purchase. To the extent any provision of this warranty is prohibited by federal or state law and cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



# Digital Manometer 608

## TestProducts International, Inc.



# The Value Leader

Visit [www.testproductsintl.com](http://www.testproductsintl.com)

## A. INTRODUCTION

1. Congratulations: Thank you for purchasing TPI products. The 608 is easy to use and built to last. Please remember to complete and return your product warranty registration card.
2. Product Description: The 608 digital manometer measures pressure or vacuum in four units of measure. Please follow manufactures recommendations on all equipment being serviced with the 608.

## B. SAFETY CONSIDERATIONS

1. Wear safety goggles.
2. Make sure system pressure does not exceed the capability of the 608 before connection.
3. Check all connections making sure they are secure with no leaks.
4. Observe all manufacturers recommendations.

## C. General Specifications

<b>Sensor Type</b>	Temperature compensated solid state
<b>Connector Type</b>	Standard 1/4" Barb Fitting
<b>Range</b>	-60 inH <sub>2</sub> O to 60 inH <sub>2</sub> O
<b>Units of Measure</b>	PSI, mBar, KPa, inH <sub>2</sub> O
<b>Over Pressure</b>	+/- 120 inH <sub>2</sub> O
<b>Operating Temperature</b>	14° to 122°F (-10° to 50°C)
<b>Power Supply</b>	9 Volt Alkaline

## D. Accuracy

Measurement	Range	Resolution	Accuracy
inH <sub>2</sub> O	+/(0.01 to 29.99)	0.01	+/-0.3 inH <sub>2</sub> O
	+/(30.0 to 60.0)	0.1	+/- 0.6 inH <sub>2</sub> O
mbar	+/(0.01 to 29.99)	0.01	+/-0.3 mbar
	+/(0.01 to 29.99)	0.1	+/-1.5 mbar
KPa	+/(0.001 to 2.999)	0.001	+/-0.03 KPa
	+/(3.00 to 15.00)	0.01	+/- .15 KPa
PSI	+/(0.001 to 2.175)	0.001	+/- 0.021 PSI

## E. MEASUREMENT TECHNIQUES

1. Turn the 608 on by pressing the ON/OFF key. The display will initially read "608" along with "APO" or "- - -", and the selected unit of measure. After this initial display the 608 is ready for use.

APO = Auto Power Off enabled - the 608 will turn off after 20 minutes  
 - - - = Auto Power Off disabled - the 608 will stay on until turned off

Follow these steps to change the unit of measure and to enable or disable auto power off as required.

a) With the 608 turned off, press and hold the ON/OFF key until the display flashes "APO" or "----" and the unit of measure annunciator.

b) Release the ON/OFF key and then press it repeatedly until the desired unit of measure is displayed. The unit of measure annunciators will cycle through mmH<sub>2</sub>O, mbar, KPa, PSI, and inH<sub>2</sub>O each time the ON/OFF key is pressed.

c) Press the ZERO key to enable or disable auto power off. "APO" displayed indicates auto power off is enabled, "- - -" displayed indicates auto power off is disabled. Pressing the ZERO key cycles between these two options.

d) Once the desired unit of measure and auto power off mode is selected, allow the 608 to turn off and then turn it back on and proceed with testing. The 608 will turn on in the last selected unit of measure and auto power off mode until changed.

2. Zero the displayed reading by pressing the ZERO button.
3. Connect the 608 to the device under test.

### Additional Features

**Backlight** - The backlight can be activated to make the display easier to see in dark environments. Press the BL button to turn the backlight on. The display will light up and "BL" will be displayed. To preserve battery life, the backlight will remain on for 15 seconds and then turn off.

**Case Magnets and Hook** - The 608 back case is equipped with magnets and a hook. This allows the 608 to be secured during tests.

## F. ACCESSORIES

Item #	Description
<b>A009A</b>	.....9 Volt Alkaline Battery (included)
<b>A774</b>	.....Silicone tubing (included)
<b>A100</b>	.....Soft Carrying Pouch (optional)